



Part No: ZGB 000 054 212/213

VTS S5: KIT COMPOSTION

- S5 VTS ECU
- 2 x ADR 'driver' cards
- S5 VTS wiring harness
- 1 x Large Velcro pad
- 4 x Blue Duraseal connectors
- 1 x Red ring Lucar connectors
- 1 x 300mm cable tie
- 5 x 140mm cable ties
- 2 x 3 amp fuses
- 2 x Black Fly leads
- User manual

TRIM REMOVAL

- Refer to ELSA for trim removal procedure.
- Passenger side dash end panel.
- Passenger Glove Box.
- Passenger's kick panel trim.
- Radio module upper glovebox.

GENERAL POINTS

It essential to read all of the instructions prior to commencing the installation

A. Do not insert the fuses until you are ready to commission the device.
Make sure the registration process has completed prior commencing installation.

B. Ensure all electrical connections are made using Duraseal connectors (where appropriate) Ref VAS 1978/14 heat shrink gun & VAS 1978/15 shrink adaptor.

C. Reapply protective to any section of the vehicle harness exposed during installation.
 Before making any connections refer to PCCS current flow diagrams. Wiring colours are subject to change and all connections must be verified with an approved multi meter.

D. Verify correct operating of all vehicle functionality pre and post installation.

PRE- INSTALLATION INFORMATION

Ensure the customer and vehicle registration process has been completed in the hub (VBPH) prior to installation. The technician must have access to a mobile device with the 'mobile installer app' downloaded or Web version.

The above must be completed or installation will not appear in the installer app and this will prevent commissioning.

The driver cards for this system need to be learnt by the device during the commissioning process, if commissioning is done via the mobile installer App you must wait to turn the cards on until prompted in the App. If commissioning by phone, follow the instructions given by the operator.

Trouble Shooting Guide


- 1) No LED on power up - Check connections for power supply, Ground and 12v +30 at fuses and VTS main connector
- 2) No or poor GPS/GSM reception - move the vehicle outside with clear sight of the sky
- 3) No +15 Ignition detected - Check fuse and VTS main connector

LED Indication	System Status
ON Solid	Initialisation phase
Off	Initialisation Phase complete
0.8s ON / 1.2s Off Flashing	Arming period
0.2s ON / 0.2s Off Flashing	System Armed
0.2s ON / 1.8s Off Flashing	Driver Card Learning Mode

Volkswagen VTS S5 Installation Manual




SYSTEM SCHEMATIC DIAGRAM

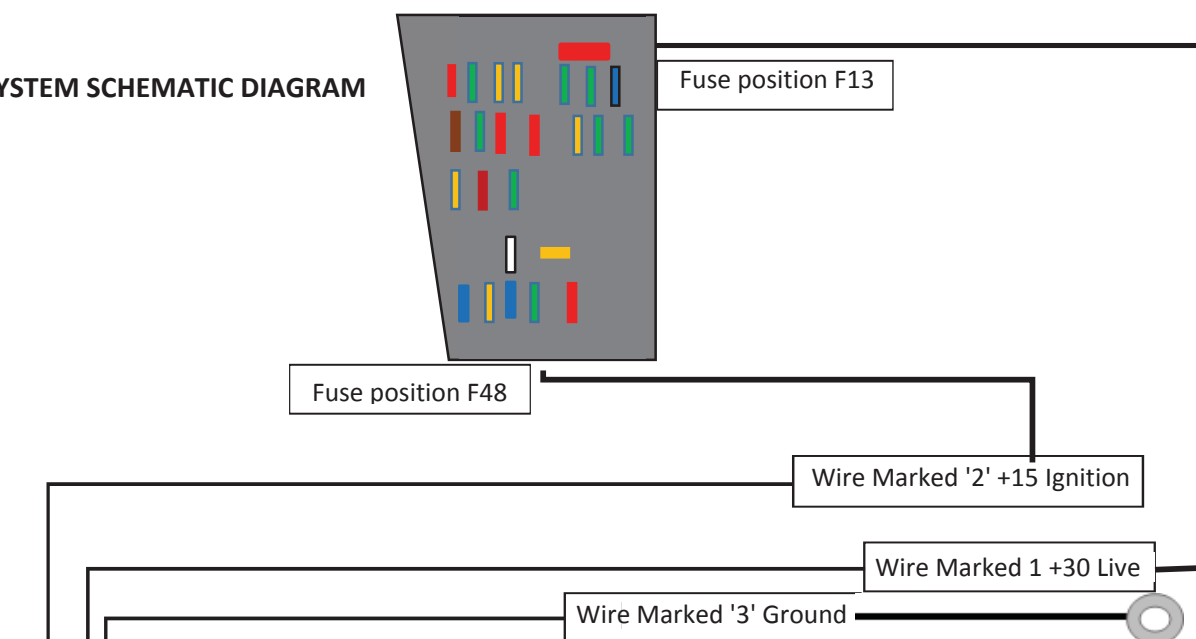

Please note the GPS external Fakra is not used in this installation


ECU ORIENTATION

The GPS antenna is located at the top of the S5 VTS ECU, the ECU must be installed with the square marked 'Top' facing upwards towards the sky.

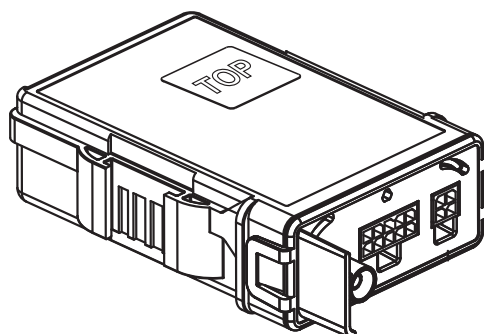

CONNECTOR PIN NUMBER	WIRE FUNCTION – IDENTIFICATION NUMBER
8	Ignition +15 Marked 2
9	Permanent Live +30 Marked 1
10	Ground Marked 3

PLEASE NOTE: the two wires marked 'ECI' are not used for this installation and must be cut and insulated.

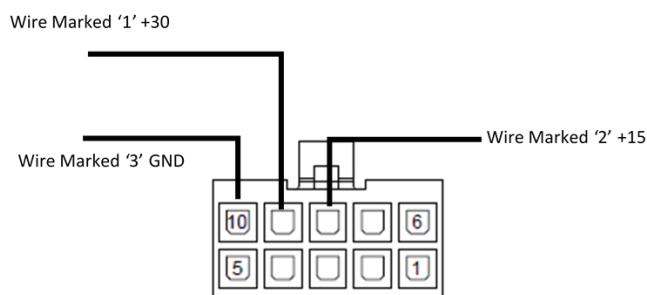

Volkswagen VTS S5 Installation Manual



1



1

1 RECORDING ECU INFORMATION

Before installing the Vodafone Automotive S5 VTS it is necessary to record the device serial number located on the top edge of the ECU, please use picture opposite as a guide.

Apply the large Velcro pad to the underneath of the unit.

2




2

2 ECU LOCATION AND MOUNTING

Identify the location for the system ECU. This is located to the rear of the infotainment screen behind the dash assembly, this can be accessed when glove box assembly is removed.

The ECU should be bonded in place using the supplied large Velcro pad.

3

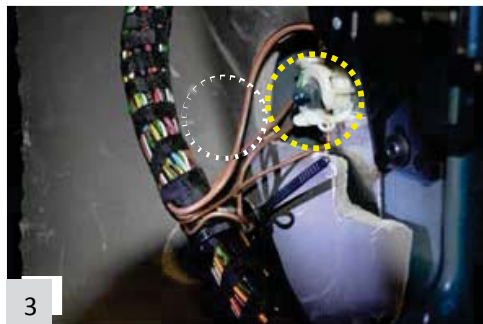


3

3 GROUND CONNECTION

Route wire marked '3' to the existing earth point, located behind passenger kick panel area. Crimp on the supplied red ring connector and secure to the M6 earth point.

Ensure that all wires are taped and routed alongside existing vehicle harness

4

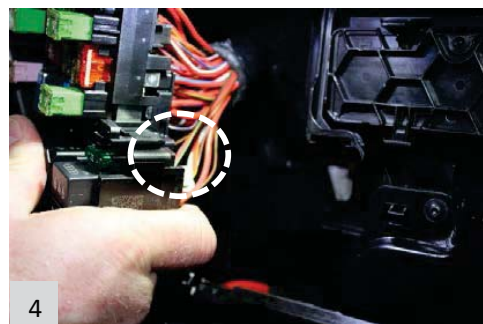

4

4 +30 CONNECTION

Crimp the supplied black fly lead with the terminal onto the wire marked '1' using the Duraseal connector supplied. Ensure that the purple locking lever is released on the fuse carrier and insert '1' wire into a vacant fuse location 13. Lock terminal latch and insert a 5 amp fuse when ready to begin the activation and commissioning process.

5



5

5 +15 CONNECTION

Crimp the supplied black fly lead with the large terminal onto the wire marked '2' using the Duraseal connector. Ensure that the purple locking lever is released on the black fuse carrier and insert '2' wire into a vacant fuse location, F48. Lock terminal latch and insert 3A fuse when ready to begin the activation and commissioning process.